


Settings with a local control (1W transmitter)

The end limits of the motor are set

Setting of the running time and programming a transmitter

1 Wiring

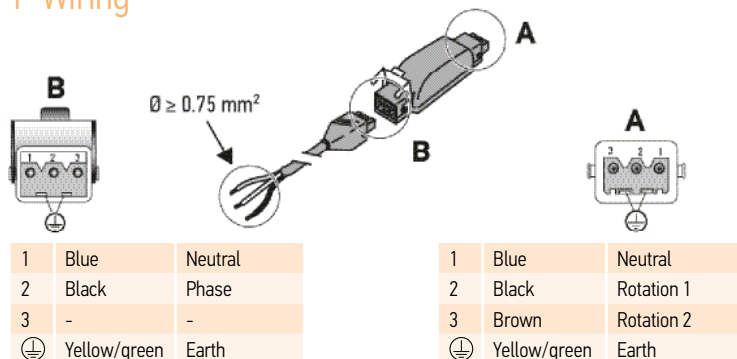

Power supply

Motor side

2 Take control of the motor



Press at the same time until...
...short movement

3 Check the rotation direction



or



Press briefly

OK → step 5

not OK → step 4

4 Change the rotation direction, if required



Press until... ..short movement → OK
→ step 5

5 Activate the setting mode



Press at the same ...short movement
time until...

6 Put the screen in the upper end limit



Press on the up
button until...
...the screen
is in the upper
end limit

7 Set the running time manually





Press at the same
time until...

...the screen
goes down

>2 s
Push directly on the "my" button
when the screen reach the lower
end limit until

...a short movement
of the screen

8 Programming the transmitter

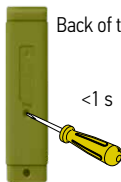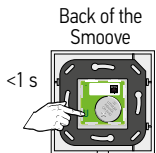

Briefly press the PROG button until...

Short movement → OK