

Monteringsanvisning

Plisségardin Modell




VS1


SCANDIC

- et soleklært valg

VS1

Viktig!

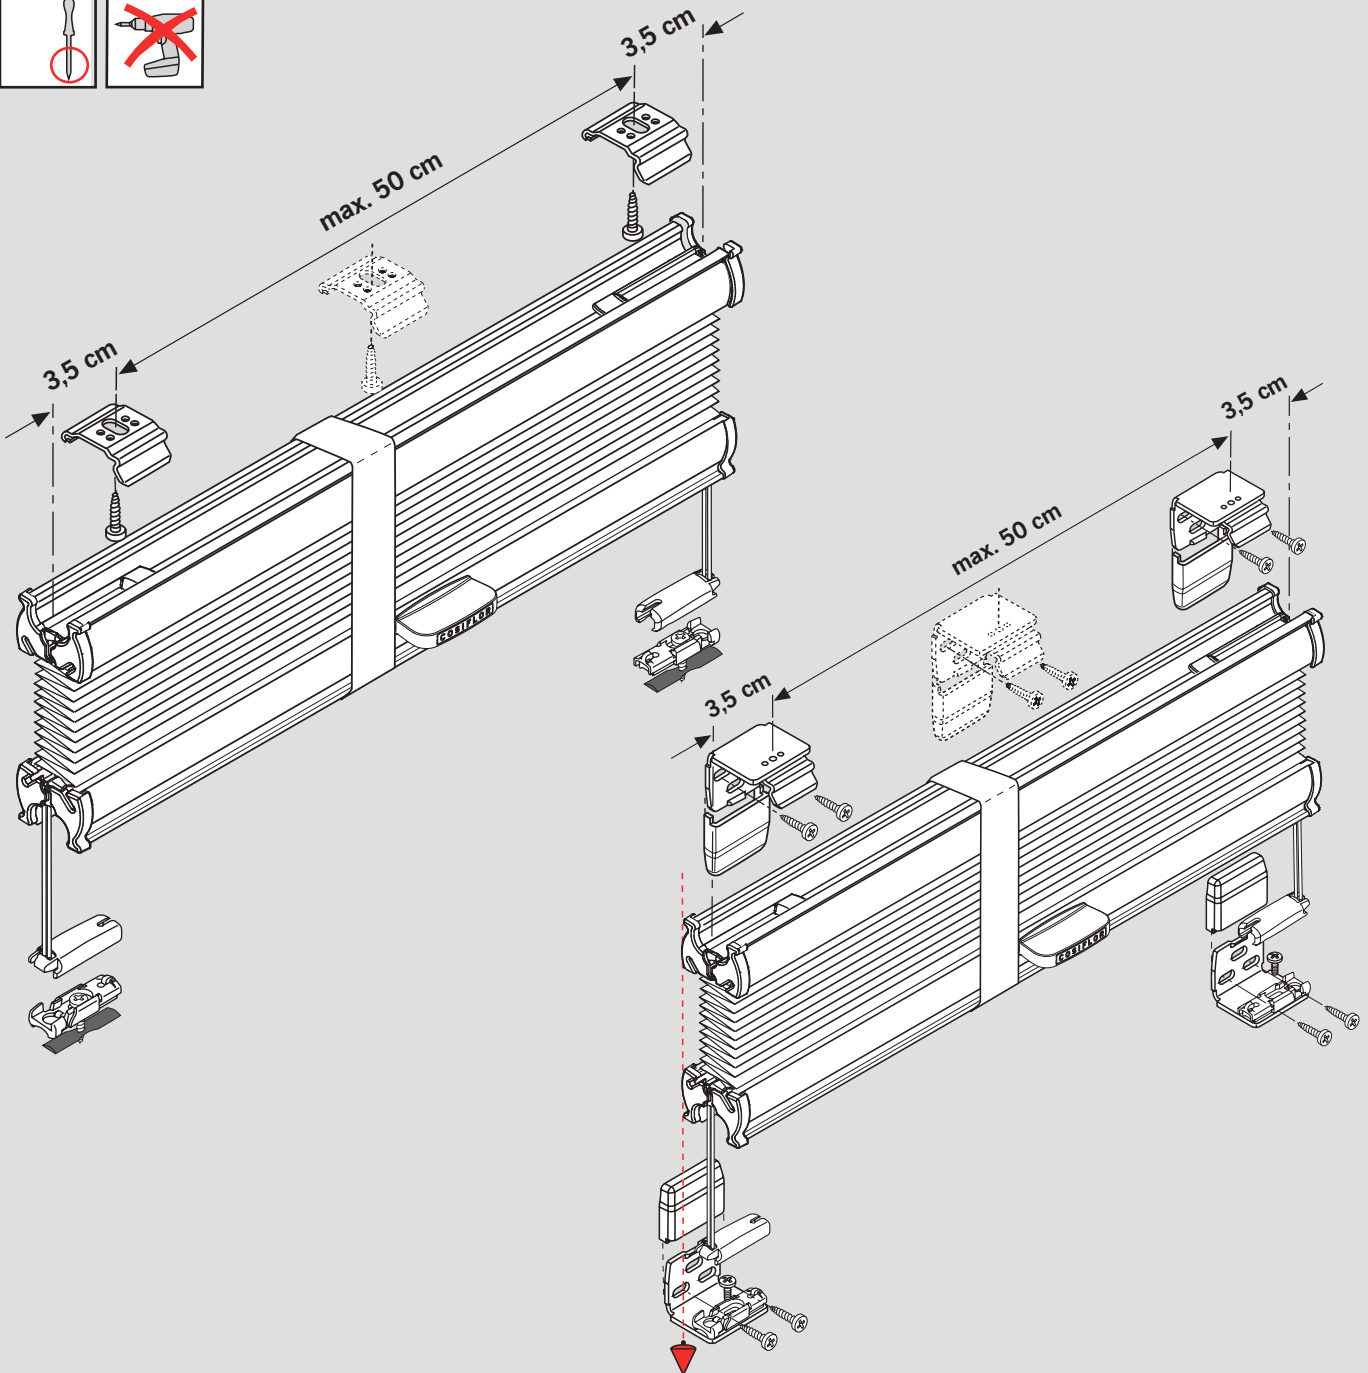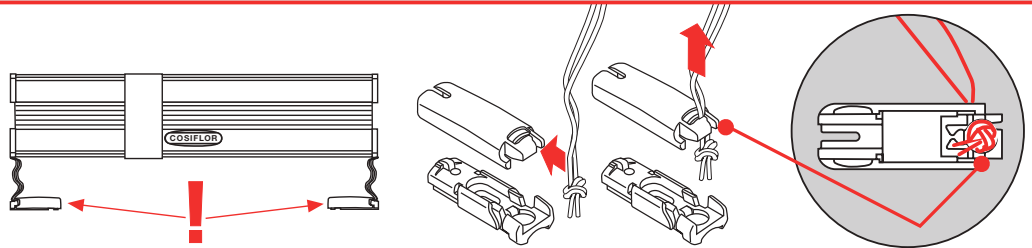

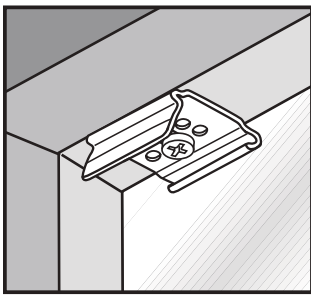



Takmontering

SCANDIC


- et soleklart valg




Montering

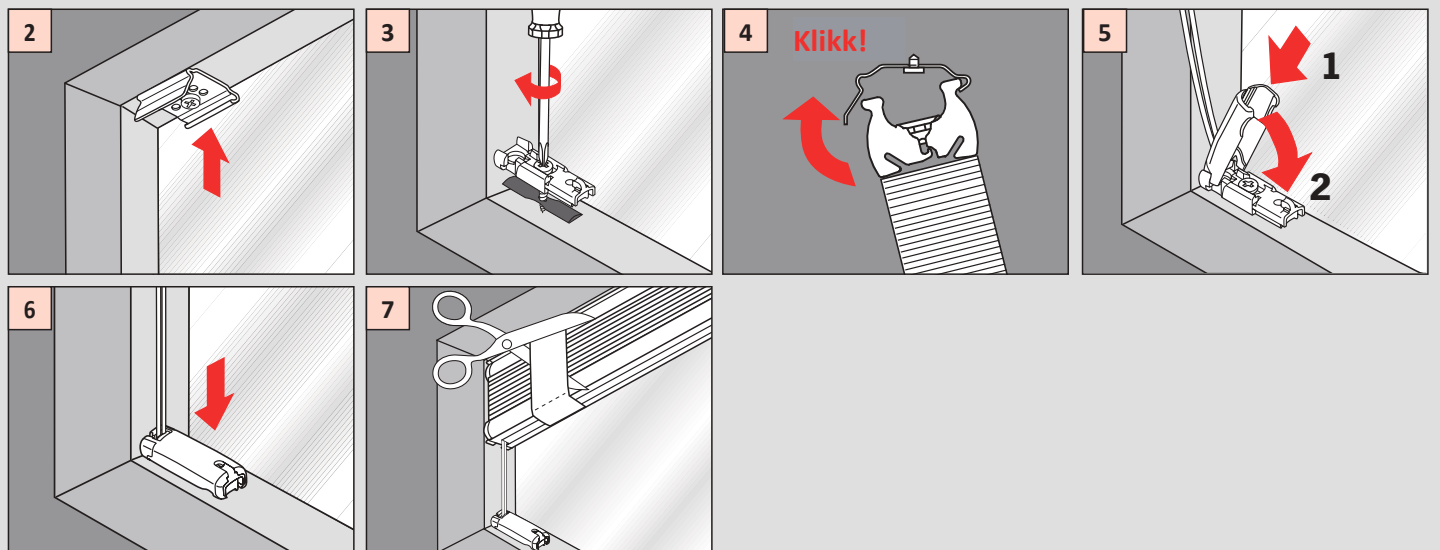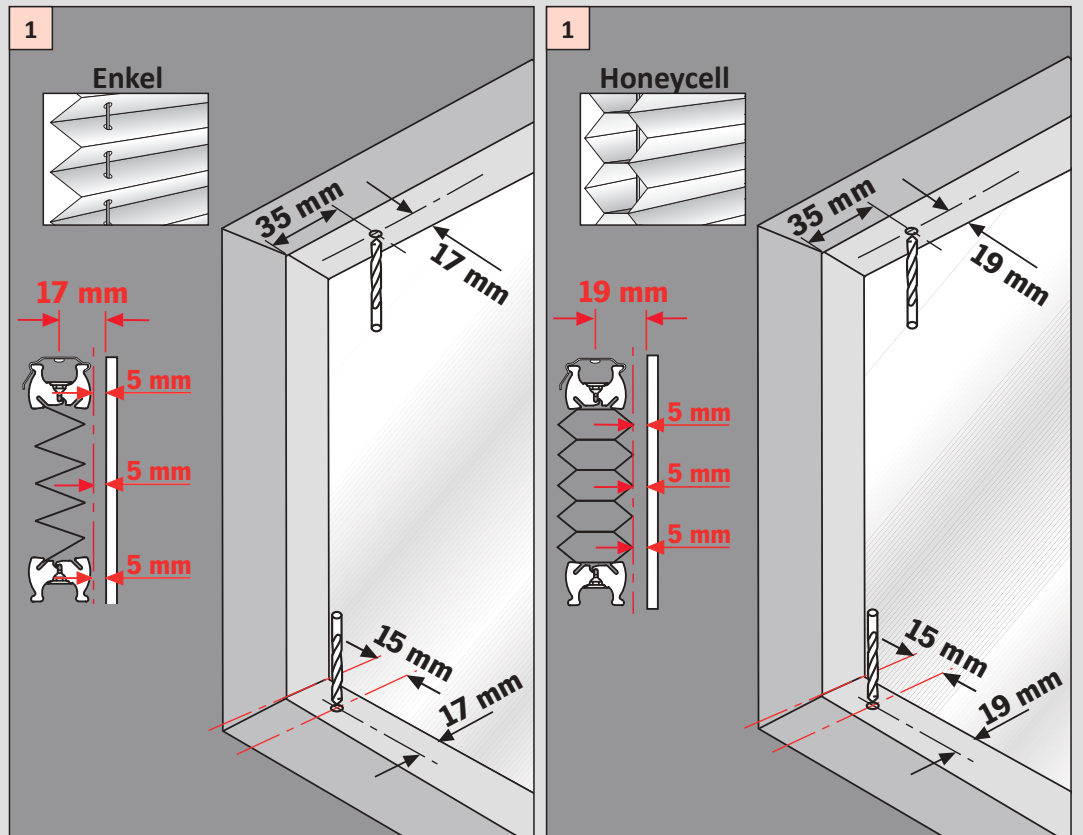


Demontering

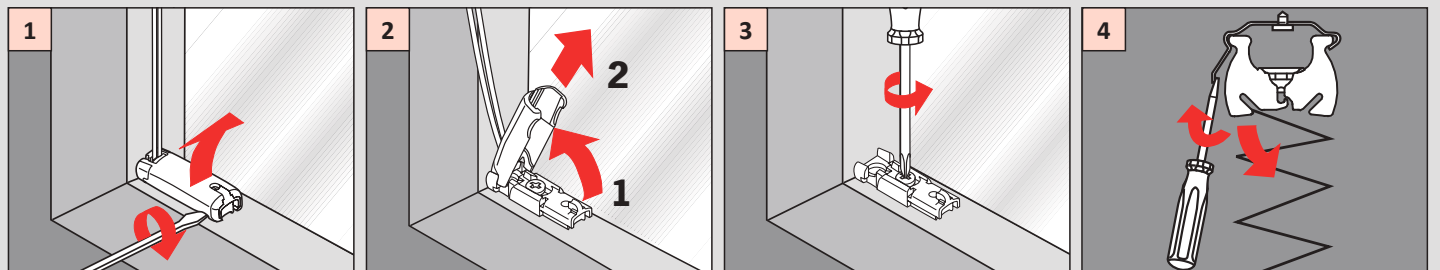












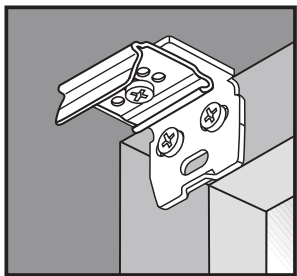


Veggmontering



Montering

- 2,2 mm Ø
- 2,0 mm Ø
- 1,5 mm Ø

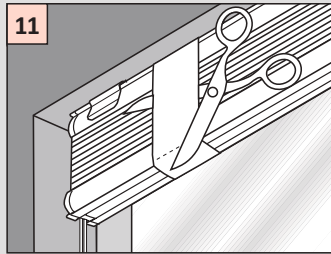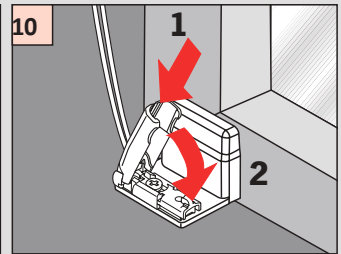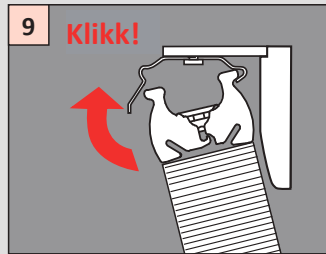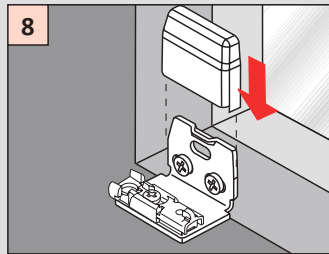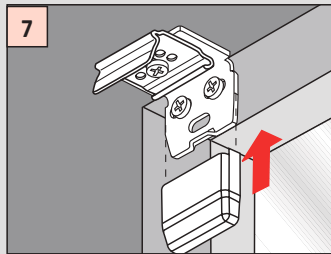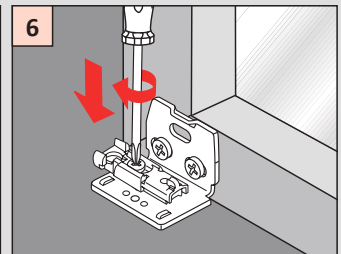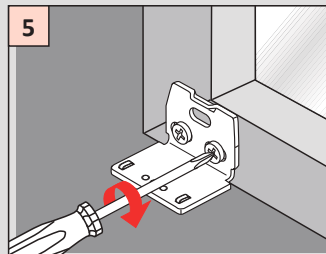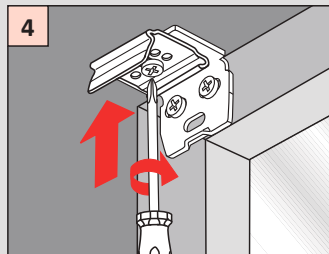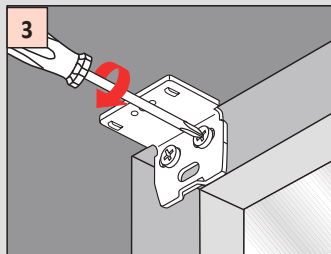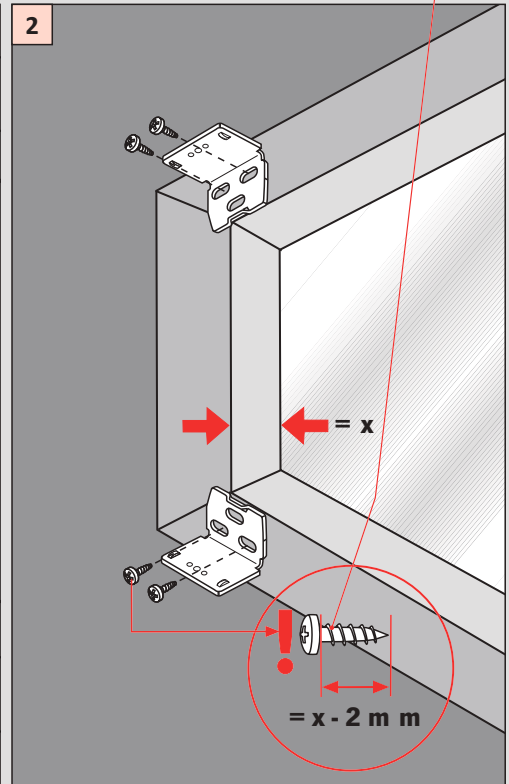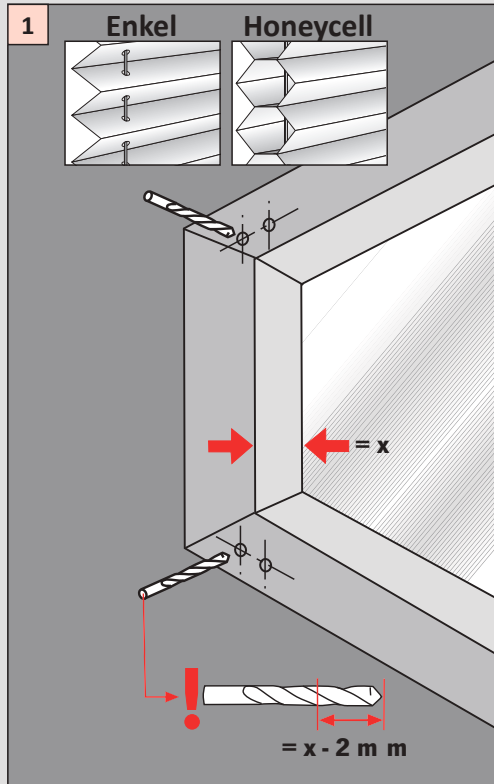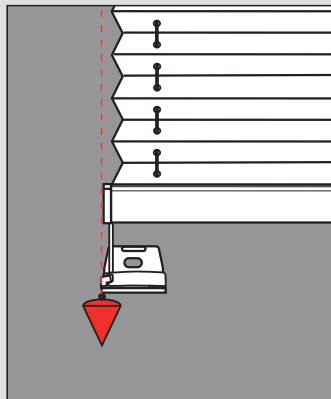

Demontering

