

Monteringsanvisning

Plisségardin Modell




VS2


SCANDIC

- et soleklært valg

VS2

Viktig!

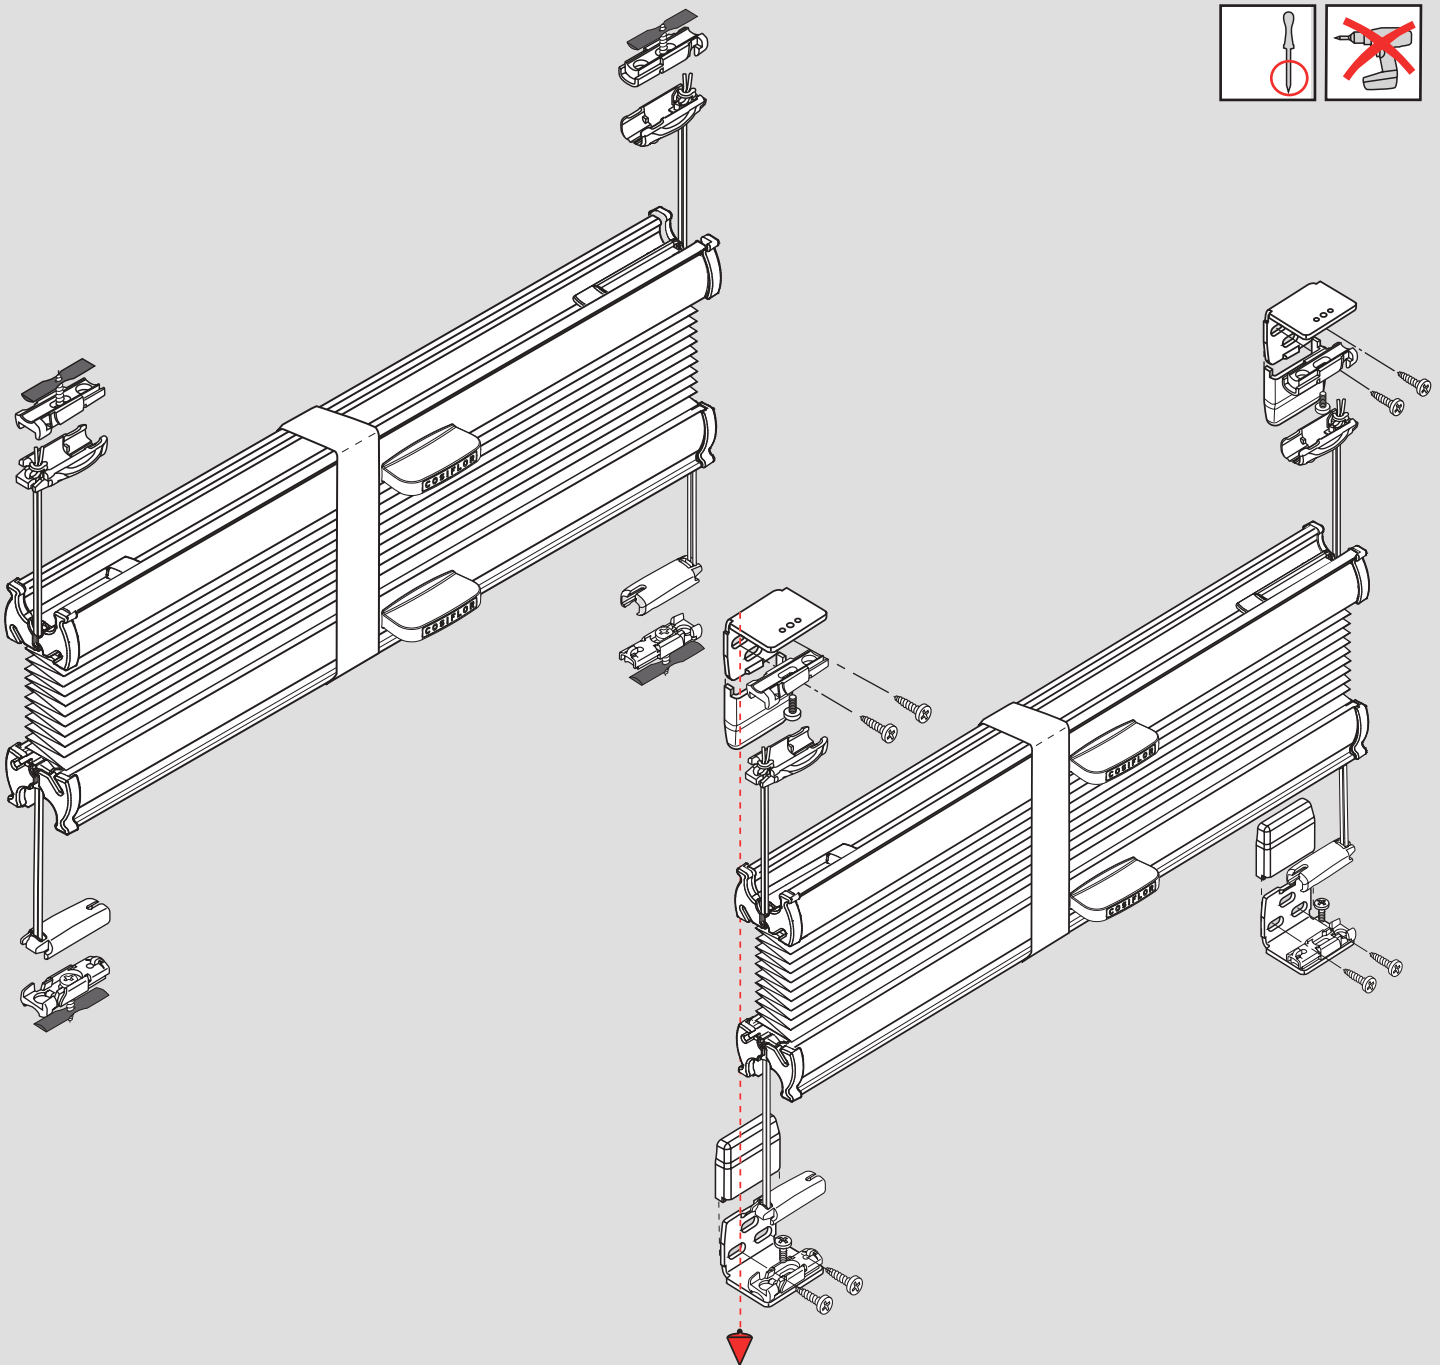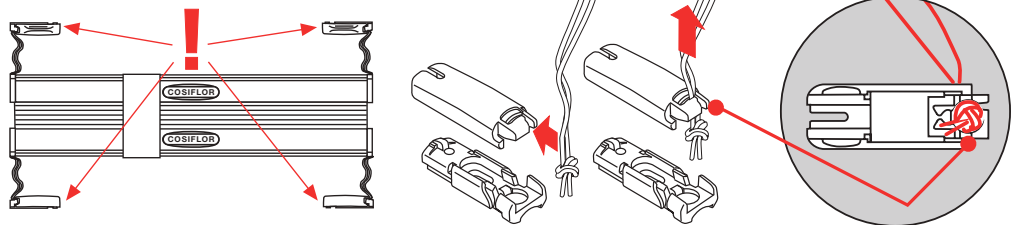


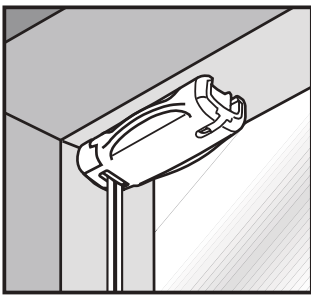










Takmontering

SCANDIC




- et soleklart valg




Montering

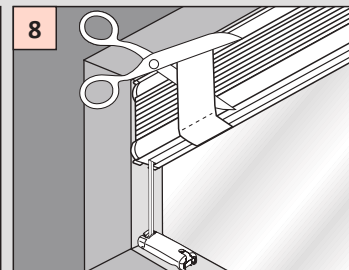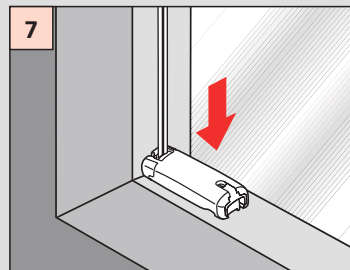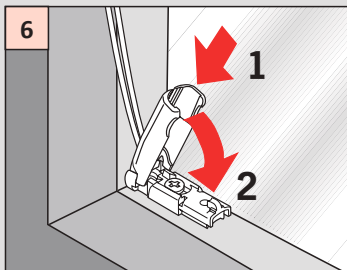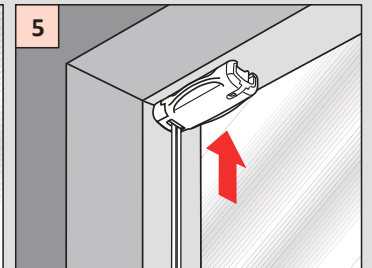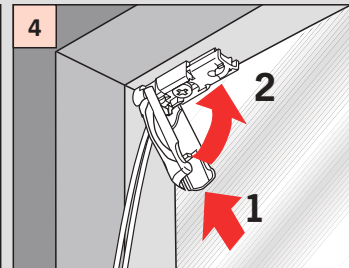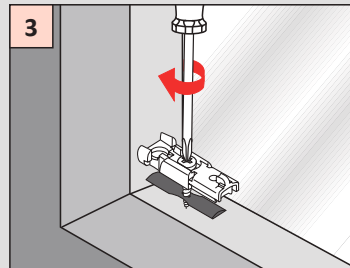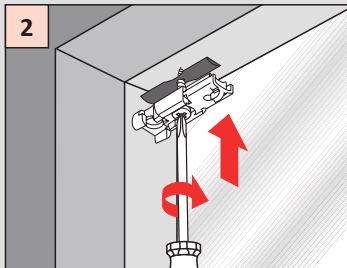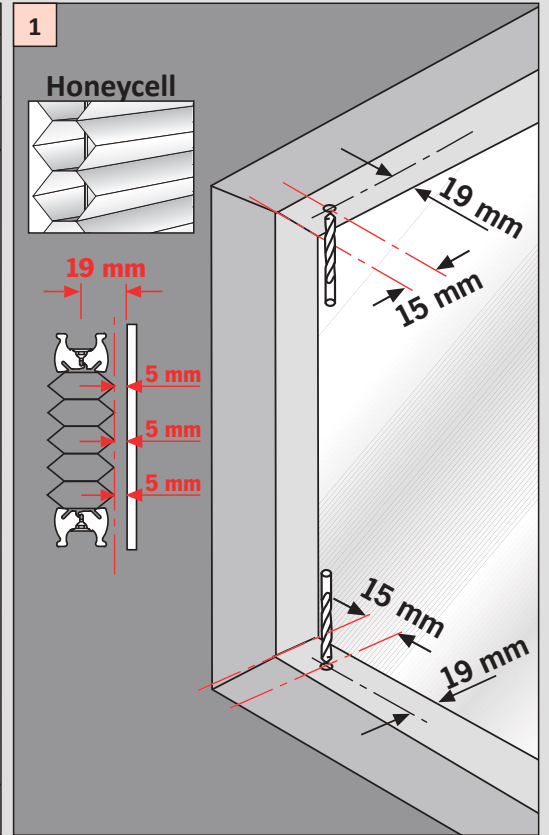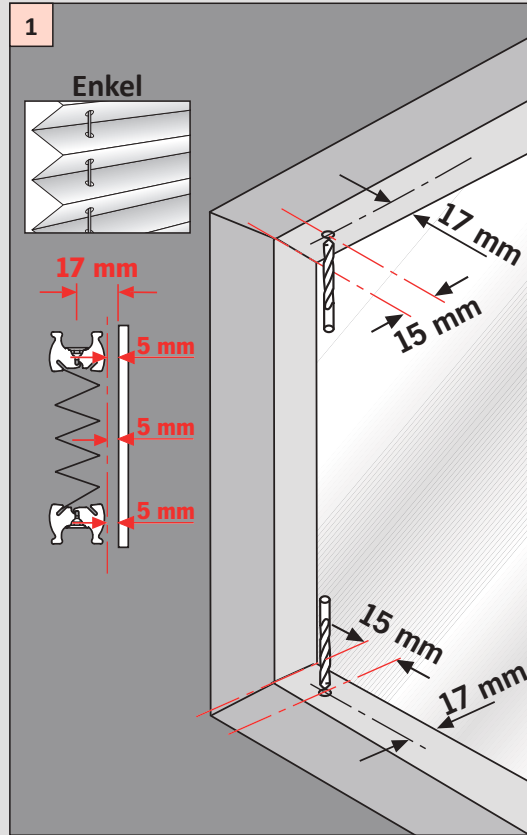

Demontering










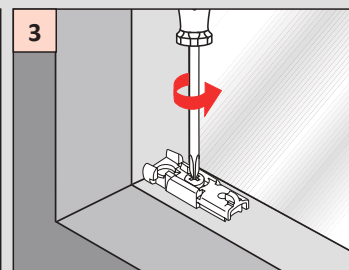
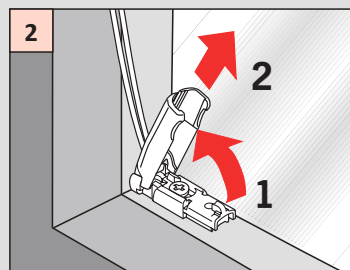
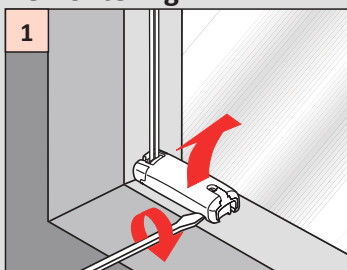


Veggmontering

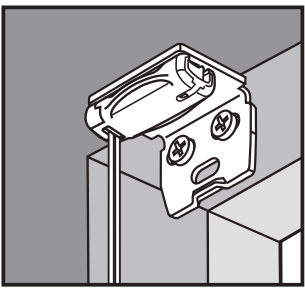

Montering

- 2,2 mm Ø
- 2,0 mm Ø
- 1,5 mm Ø

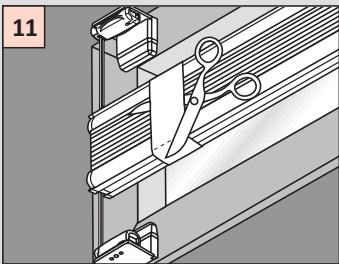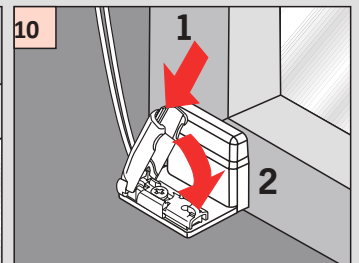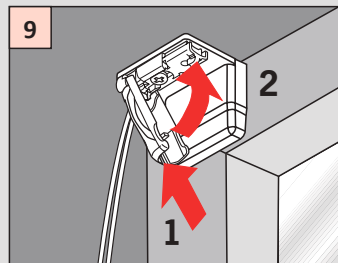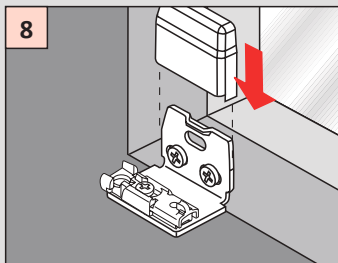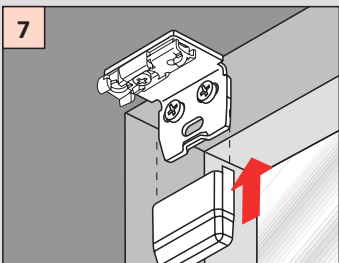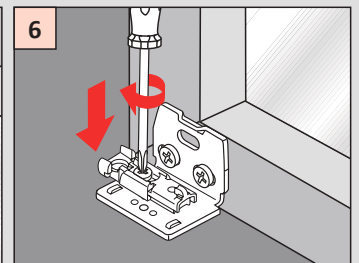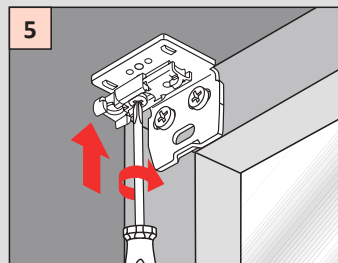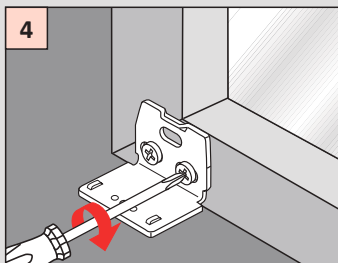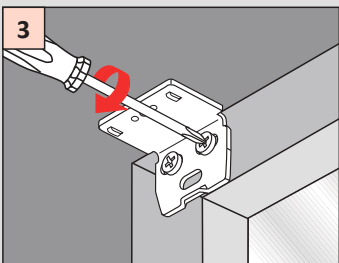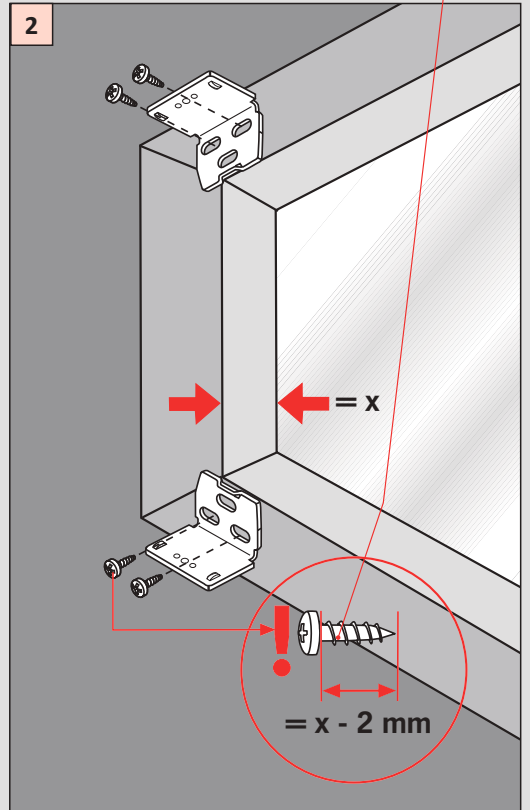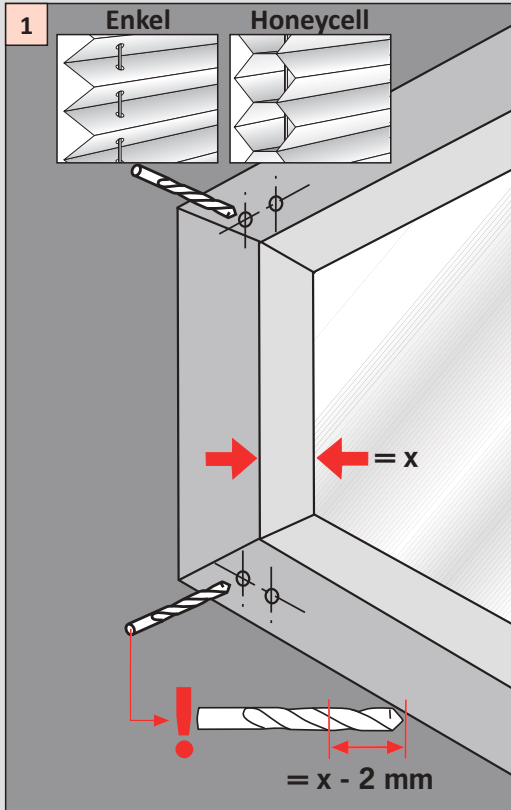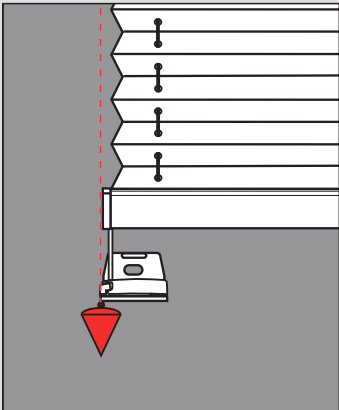

Demontering

